

Replacing your faceplates:

1. Position a small coin or flat head screwdriver as indicated and lift faceplate gently. Do not lift faceplate more than a 30 degree angle.
2. Line up new faceplate with holes and press down to secure all latching tabs.

Note: It is not necessary to remove the screws to replace the faceplate



Coin or Flat head
screwdriver

MJ270R Series