

Charger Cup	Radio Models
<b>AMK-4</b>	<b>Midland / Allan /Key:</b> Alan HP125K BP-3518Li - Special Order Only
<b>EFJ-1</b>	<b>EF Johnson:</b> Viking 8500 Series
<b>EFJ-2</b>	<b>EF Johnson:</b> Avenger 8100 Series
<b>EFJ-4</b>	<b>EF Johnson:</b> EF Johnson 5100 series. Replaces EFJ-3. Supports latest Li-Ion battery models and all other chemistries. 5100ES series, 51 Fire ES, 51LT ES, 51SI ES series, ASCEND ES series, AN/PRC-127EFJ
<b>ENT-2</b>	<b>Entel:</b> Entel HT series
<b>HYT-2</b>	<b>HYT/HYTERA:</b> TC500 Series: TC-500-U1-110, TC500-U2-110, TC500-U2-220V, TC500-V1, TC500-V1-230V, TC500-V2, TC500-V2-230 <b>BlackBox:</b> BlackBox
<b>HYT-3</b>	<b>HYT/HYTERA:</b> TC600 Series: TC600U-1, TC600U-2, TC600V-2, TC600V-2-RFB <b>BlackBox:</b> BlackBox+
<b>HYT-4</b>	<b>HYT/HYTERA:</b> TC700 Series: TC700, TC700FM, TC700MD, TC-700PT, TC780, TC780M
<b>HYT-5</b>	<b>HYT/HYTERA:</b> TC3600, TC3000, TC268, TC268S, TC368, TC368S, TC270, TC370, PT790
<b>HYT-6</b>	<b>HYT/HYTERA:</b> PD500, PD502, PD508, PD600, PD602, PD608, PD700, PD702, PD702G-U1, PD702G-V1, PD702U-1, PD702V-1, PD708, PD780, PD782, PD782G-U1, PD782U-1
<b>IC-1</b>	<b>Icom:</b> Radio Models: IC-F3, IC-F4, IC-F3S, IC-F4S Battery Models: BP195, BP196
<b>IC-2</b>	<b>Icom:</b> Radio Models: IC-F3GT, IC-F4GT, IC-F3GS, IC-F4GS, IC-F11, IC-F21, IC-F21S, IC-F22, F30GS, F40GS, IC-F30GT, IC-F40GT, IC-F30S, IC-F40G Battery Models: BP195, BP196, BP208, BP209, BP210, BP211
<b>IC-4</b>	<b>Icom:</b> Radio Models: IC-F50/F50V, IC-F60/F60V Battery Models: BP226, BP227, BP227FM
<b>IC-5</b>	<b>Icom:</b> Radio Models: IC-F70DT, IC-F70T, IC-F70DS, IC-F70S, IC-F80DT, IC-F80T, IC-F80DS, IC-F80S, IC-F9011T, IC-F9011S, IC-F9011B, IC-F9021T, IC-F9021S, IC-F9021B Battery Models: BP237, BP253, BP254, BP254FM
<b>IC-6</b>	<b>Icom:</b> Radio Models: IC-F3001, IC-F4001 Battery Models: BP236, BP264 Not Supported: BP265
<b>KEN-1</b>	<b>Kenwood:</b> Radio Models: TK190, TK278, TK260, TK360, TK270, TK272G, TK370, TK280, TK372G, TK380, TK290, TK390, TK480, TK2100, TK3100, TK3101, TK3130, TK3131, TK481, TK5400, TH-K2AT Battery Models: KNB14, KNB15, KNB16, KNB17, KNB17L, KNB20, KNB21, KNB22, KNB52 <b>Reim / Bendix King:</b> RPV Series
<b>KEN-2</b>	<b>Kenwood:</b> Radio Models: TK250, TK350, TK253, TK353, TK430, TK431 Battery Models: KNB11, KNB12
<b>KEN-3</b>	<b>Kenwood:</b> Radio Models: TK2140, TK2160, TK3140, TK3160, TK2170, TK3170, TK2360, TK3360, TK3173, TH-072A, NEXEDGE NX320 Battery Models: KNB24L, KNB25A, KNB26N, KNB35L, KNB40LC, KNB55L, KNB56N, KNB57L
<b>KEN-4</b>	<b>Kenwood:</b> Radio Models: TK2200, TK3200, TK2202, TK3202, TK2300, TK3300, TK-2302, TK3302, TK-2312, TK-3312, TK-2402, TK3402, TK-4402 Battery Models: KNB29, KNB30 KEN-4 supports these batteries when used only with the Ni-MH battery, the Li-ion battery requires KEN-6

<b>KEN-5</b>	<p><b>**This Adapter Cup is currently SOLD OUT and is being redesigned. Expected re-release is Spring 2016.</b></p> <p><b>Kenwood:</b> Radio Models: TK2180, TK3180, TK5210, TK2180MPT, TK3180MPT, TK5220, TK-5310, TK5320, TK5410, Nexedge NX200, NX210, NX300, NX410  Battery Models: KNB31, KNB32, KNB33L, I.S. battery KNB-41NC, KNB43L, KNB47L, KNB48L, KNB49PL, KNB50NC, KNB54N</p>
<b>KEN-6</b>	<p><b>Kenwood:</b> Radio Models: TK2202, TK2212, TK-2302, TK-2402, TK-3402, TK-4402, TK-3302, TK-4302, TK3202, TK3212, TK2300, TK3300, TK-4202, TK-4212, TK-4300, TK-2312, TK-3312, TK-4312  Battery Models: KNB45L  KEN-6 supports the slim Li-ion battery only, Ni batteries require KEN-4</p>
<b>MA-3</b>	<b>Harris / M/A Com / Tyco:</b> EDACS 300P, PANTHER 300P
<b>MA-5</b>	<b>Harris / M/A Com / Tyco:</b> LPE200, KPC300, KPC400, Prism, Panther 500P
<b>MA-7</b>	<b>Harris / M/A Com / Tyco:</b> Jaguar 700P, 7100P, P5100 series, P5200 Series, P7100 Series, P7130, P7150, P7170, P7370, Unity XG-100P (Battery Only), P7200 Series, P7230, P7250, P7270, P7350, P5450, P5470, P5350, P5370, P5200, P5130, P515
<b>MA-8</b>	<b>Harris / M/A Com / Tyco:</b> P7300, P5500, P5400, P5300 and XG-75 - for use in V4 only
<b>MOT-1</b>	<b>Motorola:</b> GP300, P110, GP350, P1225/LS, LTS2000, GTX/LTR
<b>MOT-2</b>	<b>Motorola:</b> HT750, HT1250LS, HT1550/LS/XLS, MTX850/LS, MTX950, MTX8250/LS, MTX9250, EX500, EX560, EX600, EX600XLS, GL200, PRO5150, PRO7150, PRO9150, PR860, Infinity P-1000, P1010
<b>MOT-3</b>	<b>Motorola:</b> P040, P080, GP308, GP88S, CT150, CT250, CT450/LS, PRO3150
<b>MOT-5/7</b>	<b>Motorola:</b> HT1000, MTX838, MTX1000, JT1000, MT1500, MT2000, MTS2000, MTX900, MTX9000, MTZ2000, MTX8000, MTXLS, XTS3000, XTS3500, XTS5000, PR1500, XTS1500, XTS2500, GP900
<b>MOT-8</b>	<b>Motorola:</b> HT600, HT800, MT1000, P200, P210, MTX800
<b>MOT-11</b>	<b>Motorola:</b> CP150, CP200, CP200d, PR400
<b>MOT-12</b>	<b>Motorola:</b> VL130, BC120, CP125, AXV5100, AXU4100, GP2000 - Special Order Only
<b>MOT-13</b>	<b>Motorola:</b> MAG ONE/BPR40, BC130
<b>MOT-14</b>	<b>Motorola:</b> MTP700
<b>MOT-15</b>	<p><b>Motorola:</b> MOTO TRBO, XPR3300, XPR3350, XPR3550, XPR6300, XPR6350, XPR6380, XPR6500, XPR6550, XPR6580, XPR7000, XPR7350, XPR7500, XPR7550, RM Series, DP2400/2600  *Battery Only: PMMN4409  <b>Vertex Standard:</b> VXD-720 Series</p>
<b>MOT-18</b>	<b>Motorola:</b> Motorola CP185
<b>MT3-2</b>	<b>Maxon / Topaz:</b> SP100, SP120, SP150, SPI140, SP300, SP310/320, SP330/340, SL25, SL55 - Special Order Only
<b>NOV-1</b>	<p><b>Novel:</b> Novel NP-60  <b>Entel:</b> Entel HX series  <b>Ritron:</b> Ritron SLX series</p>
<b>RBK-1Li</b>	<p><b>Relm / Bendix King:</b> E,G,&amp; L Series DPH 9.6V Li-ion batteries  Note: Requires -V4 version charger</p>

<b>RBK-1Ni</b>	<b>Relm / Bendix King:</b> E,G,& L Series DPH 9.6V Ni-Cd and Ni-MH batteries Note: Requires -V4 version charger
<b>RBK-2</b>	<b>Relm / Bendix King:</b> Radio Models: KNG-P150/150T2, P400/400T2, P500/500T2, P800/800T2 Batteries Supported: KAA0100-PW, KAA0100/IS Batteries NOT SUPPORTED: KAA0101, KAA0120 Note: Requires -V4BK version charger
<b>TA-1</b>	<b>Tait:</b> Tait Radios: ORCA 5010, 5020, 5030, 5035, 5040, ORCA Elan, ORCA Excel, ORCA Eclipse <b>M/A Com / Ericsson:</b> Cougar 400P, Panther 400P, 600P, 625P <b>Harris / M/A Com / Tyco:</b> Cougar 400P, Panther 400P, 600P, 625P
<b>TA-2</b>	<b>Tait:</b> TP8100 Series V4 Charger required
<b>TA-3</b>	<b>Tait:</b> TP7110 Series
<b>VY-1</b>	<b>Vertex:</b> VX110, VX150, VX160, VX180, VX210, VX400, VX410, VX800, VXA12, VXA120, VXA200, BC90, BC95, VX-414, VX-417, VX-420
<b>VY-2</b>	<b>Vertex:</b> VX600, VX900
<b>VY-3</b>	<b>Vertex:</b> VX500, VX510, VX530
<b>VY-4</b>	<b>Vertex:</b> Battery Only: VX821, VX871, VX824, VX874, VX829, VX879 Radio & Battery or Battery Only: VX921, VX971, VX924, VX974, VX929, VX979
<b>VY-5</b>	<b>Vertex:</b> Radio Models: VX354, VX351 (FNB-V96Li) *VX230 Series(For Multi-bank chargers, requires V4) Battery Models: FNB-V103Li, FNB-V104Li
<b>VY-6</b>	<b>** Currently not supported in DC-1 Chargers **</b> <b>Vertex:</b> Radio Models: VX450, VX451, VX454, VX459 Battery Models: FNB-V112Li, FNB-V113Li
<b>VY-7</b>	<b>Vertex:</b> Radios:VX-231, VX-261, VX-264, VX-350, VX-450, EVX-530 Series Radio & Batteries: V127LI-UNI, V131LI-UNI, V133LI-UNI Battery Only: V126LI-UNI, V128LI-UNI, V129LI-UNI, V130LI-UNI, V132LI-UNI, V134LI-UNI