

ご注意


本製品にヘッドセットのプラグを接続する時は、次の点にご注意願います。プラグのカバー部分を半分程度までVOXケース奥まで差し込んでください。これは、コードが引っ張られたとき、容易にプラグが抜けることを防止するためです。

また、プラグを接続したときの防滴性能を維持するために、硬めになっていますので注意してください。

なお、プラグを抜くときは、必ずプラグのカバー部分を持って引き抜いてください。絶対にコードを引っ張ってプラグを抜かないでください。コードを引っ張ると、断線する場合があります。

VOX機能が動作しない場合、プラグが確実に差し込まれているか確認してください。

[PTT-VOX]スイッチは、端までスライドさせて確実に切り替えてください。確実に切り替わっていないときは、PTT、およびVOX機能が使えない場合があります。

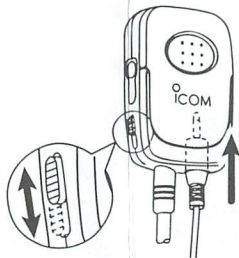

IMPORTANT!

When connecting an optional headset, even though the plug may feel tight due to drip-resistant construction, the plug should be firmly inserted into the VOX unit. (So that the cover is half-way inserted) This prevents the plug from being disconnected easily when the cable is pulled.

NEVER pull the cable to disconnect the plug, otherwise the cable may be damaged.

Please check the correct connection of the headset plug, if the VOX function does not work.

Make sure the [PTT-VOX] switch is switched over completely to the opposite end to ensure correct operation. Otherwise, both the PTT and VOX function may not work properly.